




PUMPS THAT EXPERTS SELECT.

Pipe Strain

Pipe Strain:

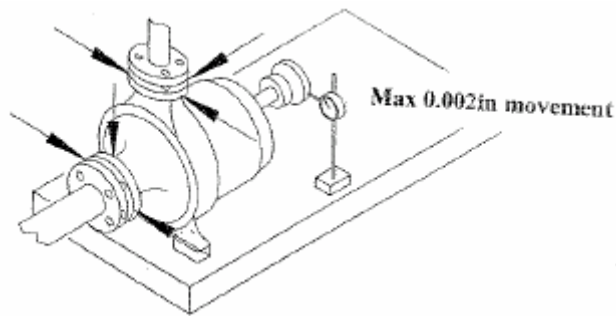


Measurement Points for Verification of Pipe Strain

As a quick review

- Understand pipe strain is one of the leading causes of pump failures.
- Pipe strain is best handled during the installation of new equipment.
- If pipe strain exists it must be eliminated; doing so will save money rather than the expense and downtime of repetitive failures.
- Time, training, and tools are required to correct pipe strain.

References:

1. "Vision Consulting and Engineering Solutions PipeAlign brochure," Jason Vaughn, December, 2002.
2. "Piping-to-Pump Alignment: Getting it Right," Lois Rizzo, GRI Practices, Lev Nellik, Liquido Equipment, Pumps and Systems, July 1999.
3. "ASME Code for Pressure Piping, B31 An American Standard; Chemical Plant and Petroleum Refinery Piping, page 71, ASME B31.3-1993 Edition.
4. "Reliabilityweb.com," on-line chat http://www.reliabilityweb.com/vchat/strider_01.htm, July 2003.
5. FMC Pump Survey, 1997.
6. "Measuring the Effects of Pipe Strain on Shaft Alignment," Loduca, Inc., Rotalign Tech Note No. 5, 1997.

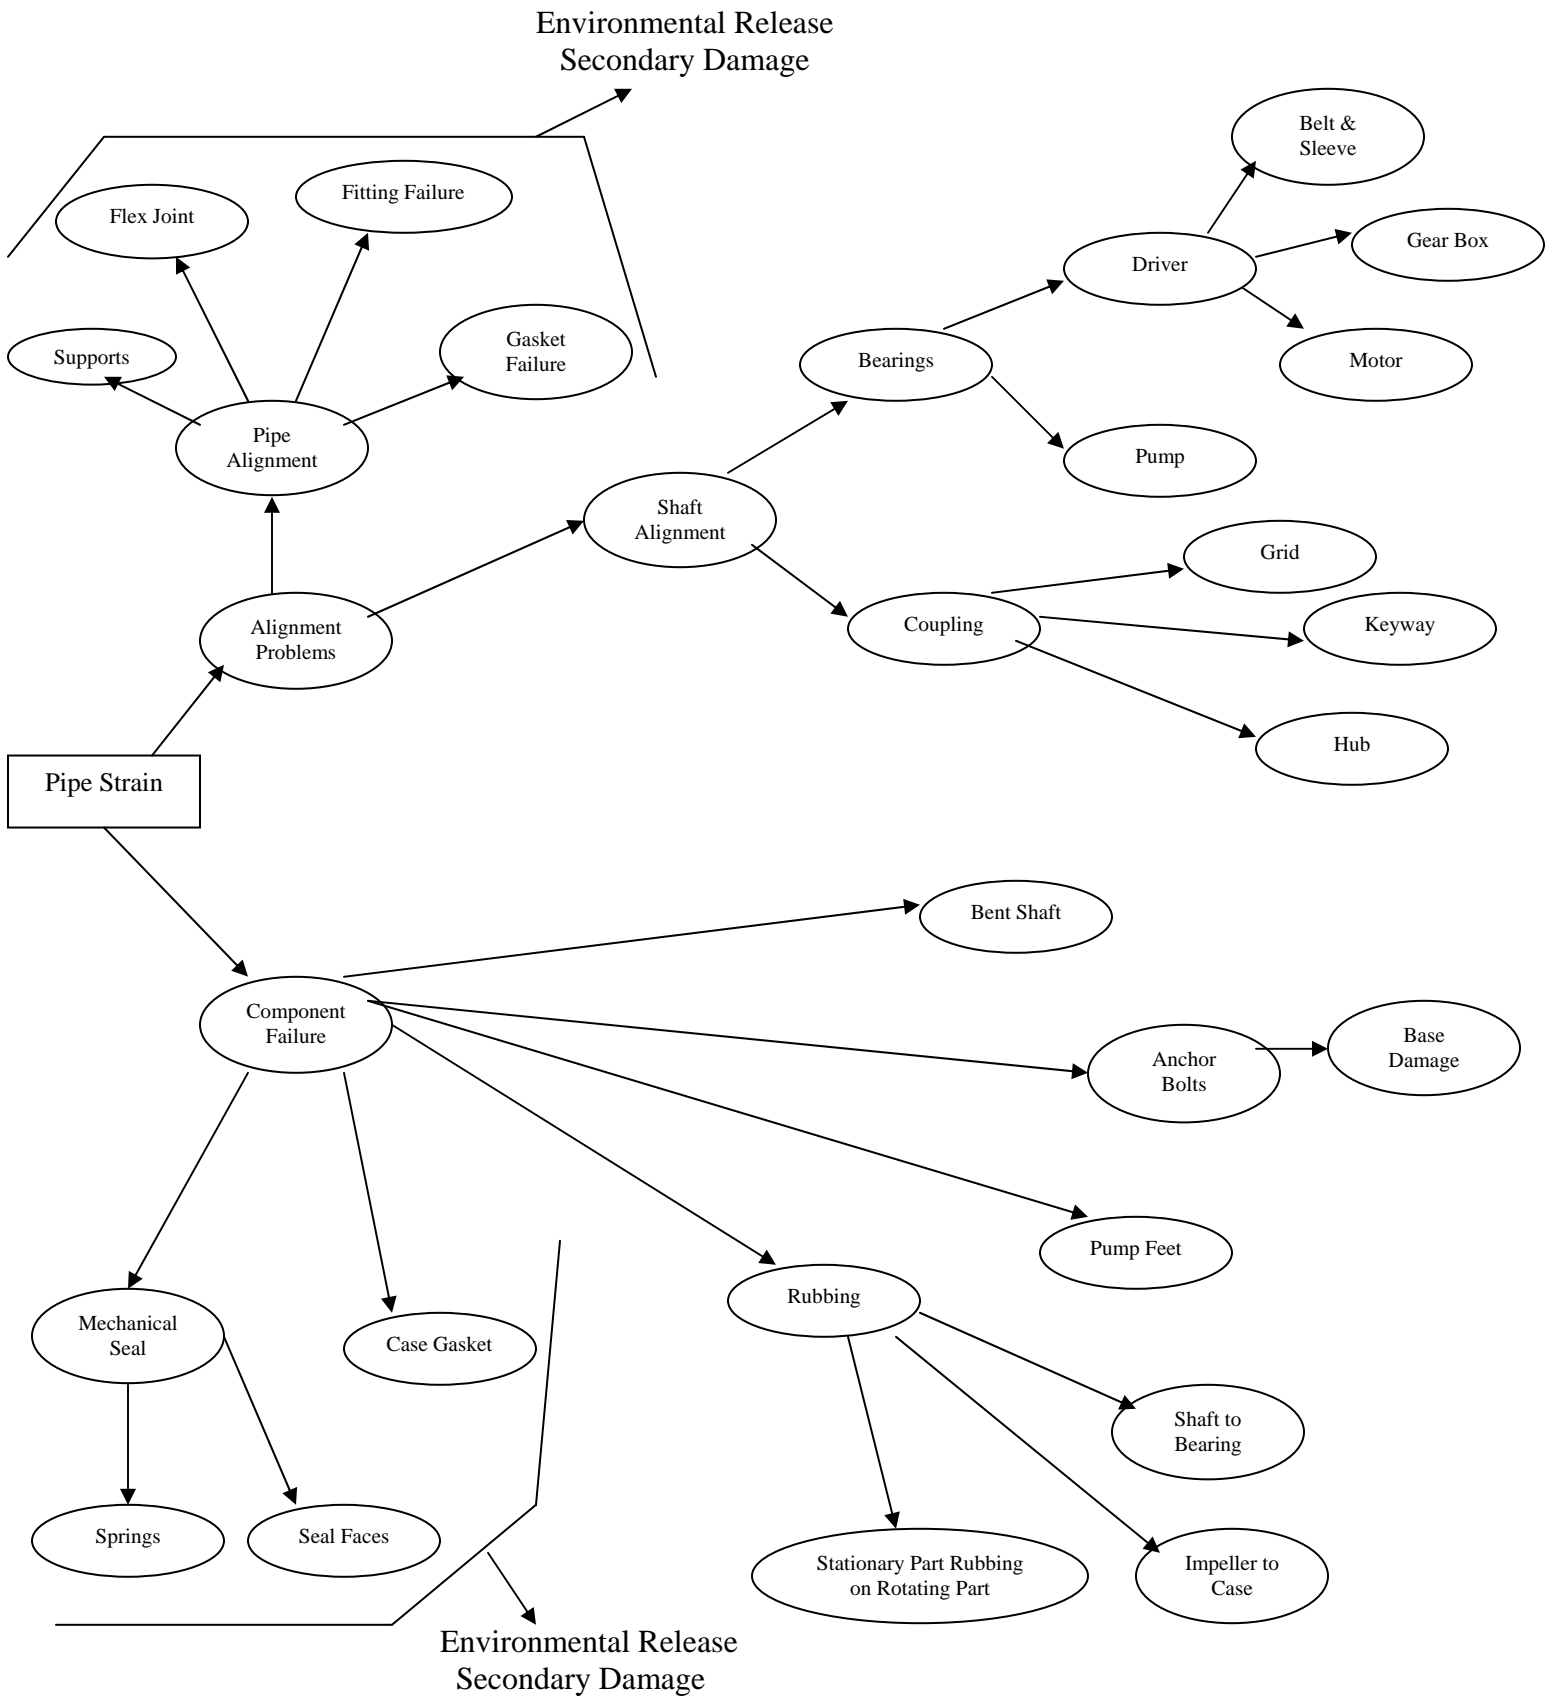

LaBour Pump Company – 901 Ravenwood Drive, Selma, Alabama 36701

Ph: (317) 925-9661 - Fax: (317) 920-6605 - www.labourtaber.com

A Product of Peerless Pump Company Copyright © 2005 Peerless Pump Company

